




Components

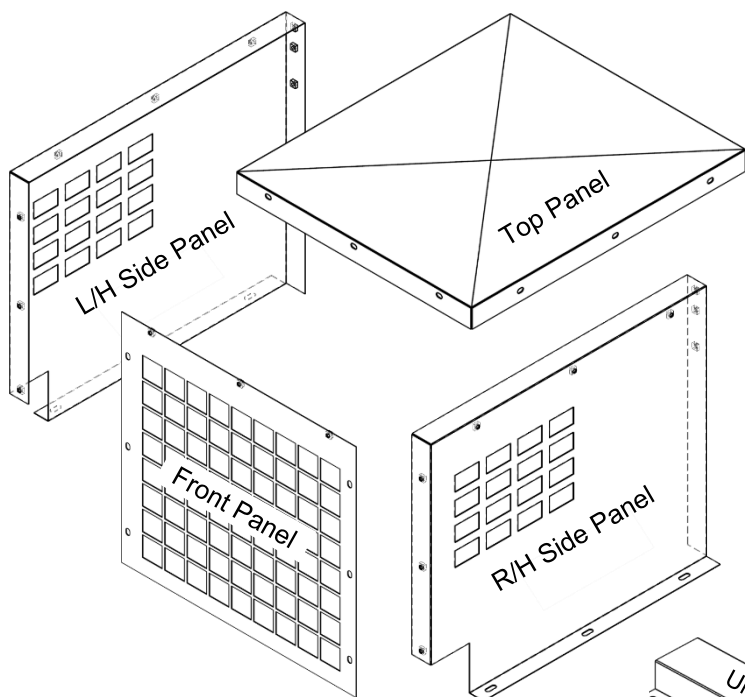

| Kit Components | |
|----------------|---|
| Qty | Description |
| 1 | Top Panel |
| 1 | L/H Side Panel |
| 1 | R/H Side Panel |
| 1 | Front Panel |
| 1 | Rear Strap - Optional (suits smaller condenser height) |
| 2 | Unit Cover Feet |
| 6 | Self-Drilling TEK Screws (10G x 3/4") |
| 21 | Stainless M6 Bolts |
| 21 | Stainless M6 Flat Washers |
| 21 | Stainless M6 Spring Washers |

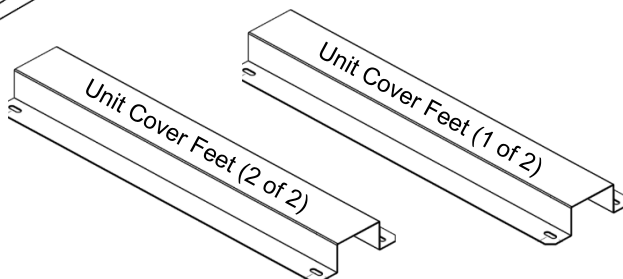

Assembly Tips

| | |
|---|--|
| 1 | Place Top Panel upside down onto a non-abrasive flat surface. |
| 2 | Fit Side Panels into the Top Panel using the bolts, flat washers & spring washers supplied. <u>Note:</u> at this stage do not tighten bolts. |
| 3 | Place the Unit Cover Feet into position & put the Condensing Unit on the feet. <u>Note:</u> each foot is designed to run from left to right of the unit cover. |
| 4 | With the Side Panels attached place the unit cover over the Condensing Unit. |
| 5 | Ensure the Front Panel slides freely into place behind the Top Panel & the bolts line up with the relevant threaded nut-spots. |
| 6 | Ensure all panels are aligned correctly then tighten bolts before securing the unit cover, Condensing Unit & feet into position. |

Note

Self-drilling TEK screws supplied in kit are to secure cover to the feet or alternately the cover to a flat surface if feet are not utilised.

Fixings to secure the Condensing Unit and the Feet are not included in the kit.

